37840 PWG 88

1. Removing the roof





Pull the roof slightly forward and then remove it upward.





Release the latch and pull the pulpit roof upward with some force to release the remaining latches.

2. Assembeling of the roof





1) First, the roof is connected to the pre-assembled pulpit roof and mounted evenly on the car body.